

ALTERNATOR WHINE AND/OR IGNITION NOISE IN ALL 4 SPEAKERS (May Occur Only at Low Volume)

CorvetteRadios.Com 503-422-7334

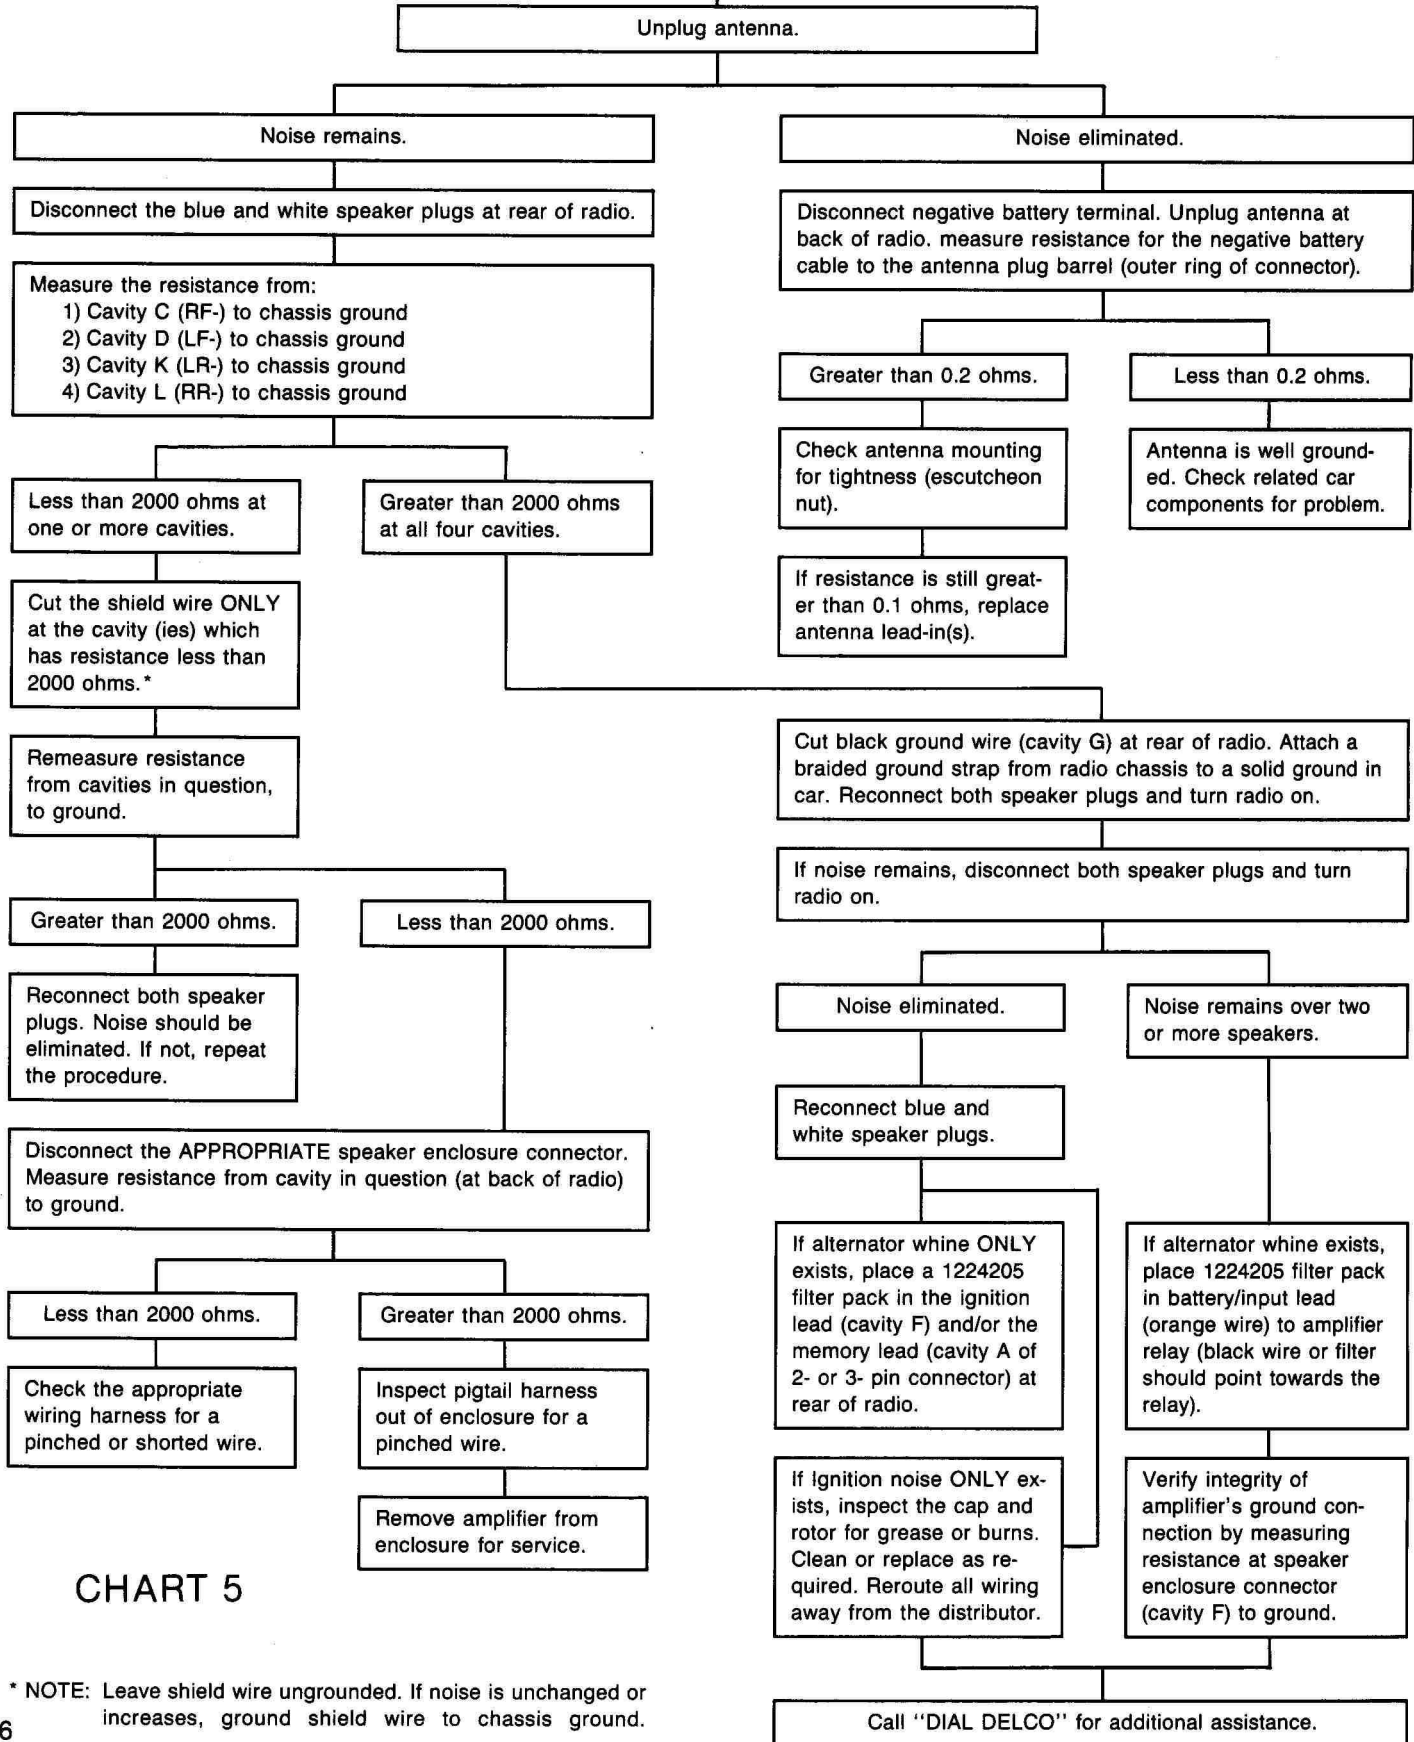


CHART 5

* NOTE: Leave shield wire ungrounded. If noise is unchanged or increases, ground shield wire to chassis ground.